


SHAD

SYM MAXSYM 400 '21 KIT RESPALDO SOMS41RV

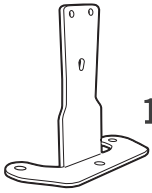

1 262742 x1



2 260740 x3
Ø20 Ø11 x 11




3 303045 x5
Ø8



4 304039 x1
M8 x 40
Din 7380



5 304258 x2
M8 x 35
Din 933

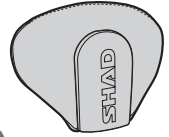

! NOT INCLUDED

! WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

